



# RapID Platform PROFIBUS Network Interface

## *Module Datasheet*



Document #: IA211130425-00  
UNCONTROLLED WHEN PRINTED OR COPIED

Copyright © 2013 by Innovasic, Inc.

Published by Innovasic, Inc.  
5635 Jefferson St. NE, Suite A, Albuquerque, New Mexico 87109 USA

RapID™ Platform, PriorityChannel™ and fido® are trademarks of Innovasic, Inc.



Document #: IA211130425-00  
UNCONTROLLED WHEN PRINTED OR COPIED

## TABLE OF CONTENTS

|     |                                                                                    |    |
|-----|------------------------------------------------------------------------------------|----|
| 1.  | Module Overview .....                                                              | 5  |
| 2.  | Physical Dimensions and Connector Pinout .....                                     | 6  |
| 2.1 | Physical Constraints.....                                                          | 6  |
| 2.2 | Signal Interface Connector .....                                                   | 8  |
| 2.3 | Connector Pinout .....                                                             | 10 |
| 2.4 | Power requirements .....                                                           | 15 |
| 2.5 | Reset Requirements .....                                                           | 15 |
| 3.  | Host Processor and PROFIBUS Network Interface Module Communication Interfaces .... | 15 |
| 3.1 | UART Host Interface.....                                                           | 15 |
| 3.2 | Parallel Host Interface .....                                                      | 16 |
| 4.  | Considerations for Production and Maintenance .....                                | 17 |
| 4.1 | Bootloader.....                                                                    | 18 |
| 4.2 | JTAG.....                                                                          | 18 |
| 4.3 | Flash Programmer.....                                                              | 19 |
| 5.  | For Additional Information .....                                                   | 20 |
| 6.  | Revision History.....                                                              | 20 |

## LIST OF FIGURES

|                                                                                      |    |
|--------------------------------------------------------------------------------------|----|
| Figure 1 – Overview of Module Components and Interfaces .....                        | 5  |
| Figure 2 - Dimensions of the PROFIBUS Network Interface Module (Plane View) .....    | 7  |
| Figure 3 - Dimensions of the PROFIBUS Network Interface Module (Cross-section) ..... | 7  |
| Figure 4 - Socket dimensions to mate the PROFIBUS Network Interface Module .....     | 8  |
| Figure 5 - Location of X1 connector and Pin A1.....                                  | 9  |
| Figure 6 - Summary of Connector Pin Names.....                                       | 10 |
| Figure 7 – UART Host Interface Connection .....                                      | 16 |
| Figure 8 – Parallel Host Interface Connection.....                                   | 16 |
| Figure 9 – Programming Connections and Devices .....                                 | 17 |

## LIST OF TABLES

|                                                                                        |    |
|----------------------------------------------------------------------------------------|----|
| Table 1 – PROFIBUS Network Interface Module Connector Pin Definition – X1-A Connector  | 11 |
| Table 2 – PROFIBUS Network Interface Module Connector Pin Definition – X1-B Connector. | 12 |
| Table 3 – PROFIBUS Network Interface Module Connector Pin Definition – X1-C Connector. | 13 |
| Table 4 – PROFIBUS Network Interface Module Connector Pin Definition – X1-D Connector  | 14 |
| Table 5 – Document Revision History for IA211130425.....                               | 20 |

## 1. Module Overview

The RapID Platform PROFIBUS Network Interface module contains everything needed including the communications controller, protocol stacks, Flash, RAM, and analog driver. Figure 1 provides an overview of the module.

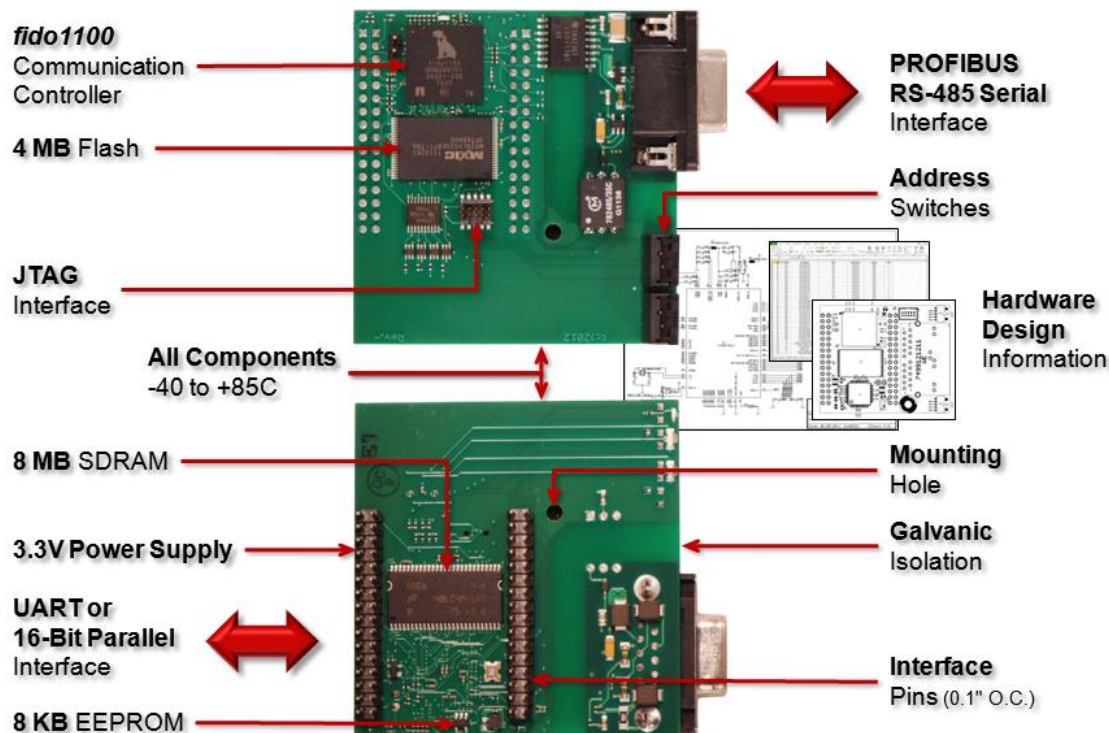


Figure 1 – Overview of Module Components and Interfaces

The remainder of this document provides technical details for the PROFIBUS Network Interface module and the information necessary to integrate the module into a circuit card.

## 2. Physical Dimensions and Connector Pinout

This paragraph describes the process for installing the PROFIBUS Network Interface module in a field device's application hardware. The process is straightforward and consists of designing a low-cost socket into the application hardware to provide signal interface and power connections. Only a single +3.3V power supply is required. In addition, a UART or parallel interface is used to communicate with a host processor.

Any unused module inputs may be left floating. The appropriate pull-up resistors are included on the module.

### 2.1 Physical Constraints

The PROFIBUS Network Interface module is 2.485" (63,12mm) x 2.559" (64,99mm) as shown in Figure 2. The module height from the X1 seating plane is 0.655" (16,63mm) as shown in Figure 3. The DB9 connector, Hexadecimal address node switches, and all LEDs are conveniently located along one edge of the PC board for easy access. Note that the DB9 is extended past the edge of the board and the LEDs are flush with the PC board edge. The power and bi-color LED indicators are on the bottom side of the PC board as shown in Figure 3.

All components on the bottom of the PC board are above the X1 connector seating plane, as shown in Figure 3. All components on the application hardware that are within the PROFIBUS Network Interface module outline should be shorter than the target system's X1 mating connector to prevent physical interference. The recommended mating connector defined in the next paragraph (SSW-116-21-F-D) has a height of 0.335" (8,51mm). If the recommended mating connector is used, all components within the PROFIBUS Network Interface module outline should be shorter than 0.335" (8,51mm).

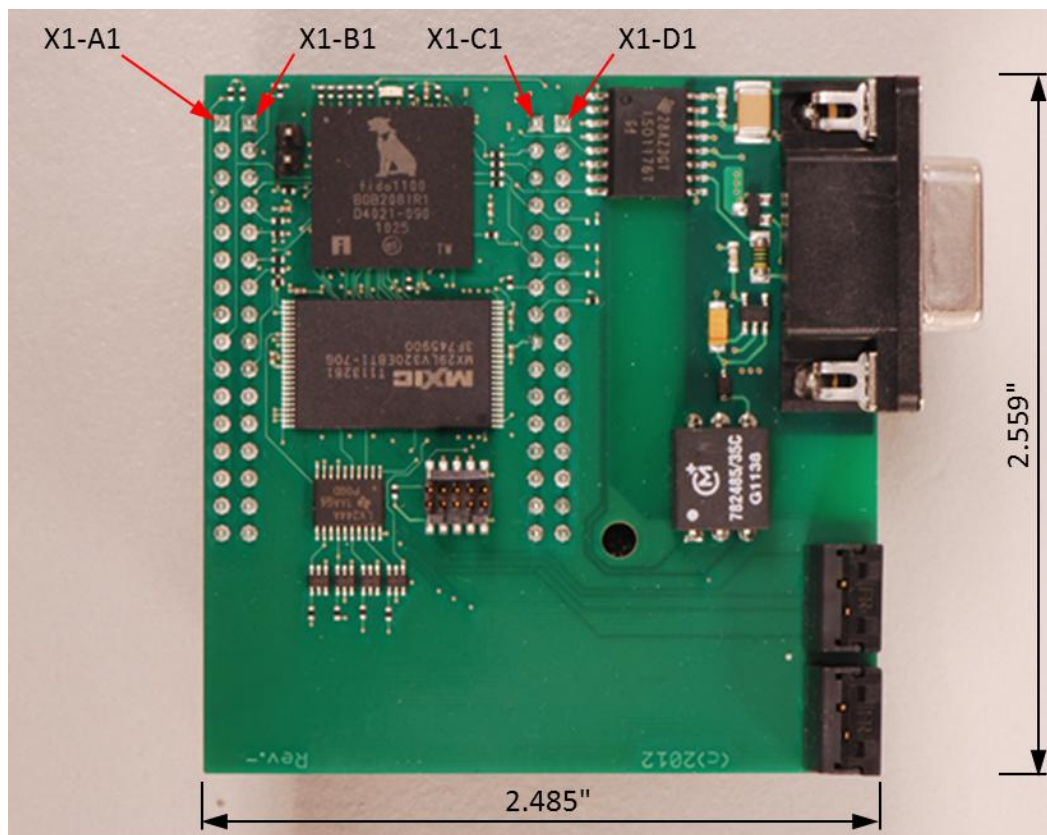


Figure 2 - Dimensions of the PROFIBUS Network Interface Module (Plane View)

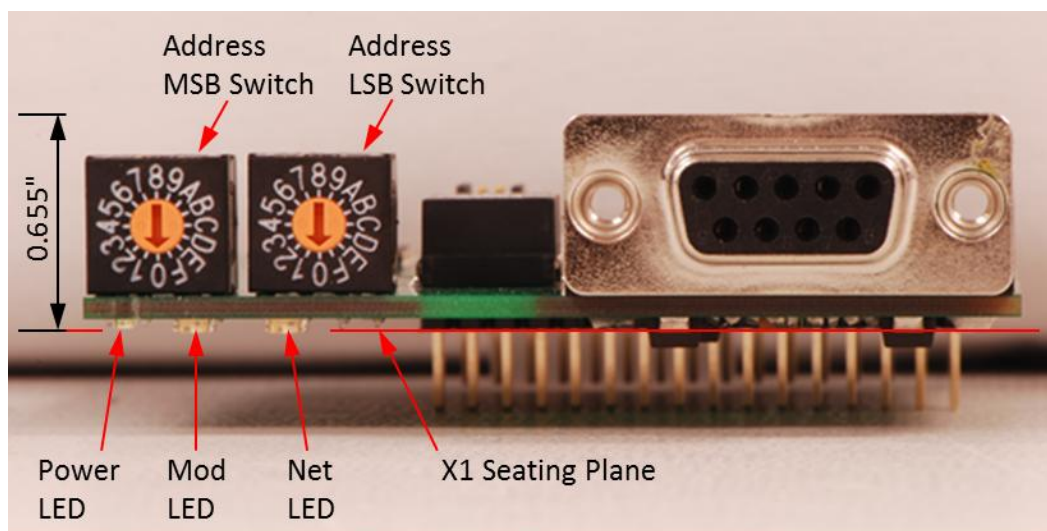


Figure 3 - Dimensions of the PROFIBUS Network Interface Module (Cross-section)

## 2.2 Signal Interface Connector

The module is installed into the target system using a 64 pin, 0.1" (2,54mm) pitch socket. This socket consists of 4 rows of 16 pins, as shown in Figure 4. The connector reference designator in the PROFIBUS Network Interface module schematic is X1. The 4 rows are designated A, B, C and D. Rows A and B are on 0.1" (2,54mm) centers, as are rows C and D. The connector can be implemented by using 2 dual row connectors, 1 for rows A and B, and 1 for rows C and D. The recommended connector for each of these is Samtec part number SSW-116-21-F-D. The additional non-plated through hole shown in Figure 4 is a mounting hole. This non-plated through hole is a 0.125" (3,175mm) hole.

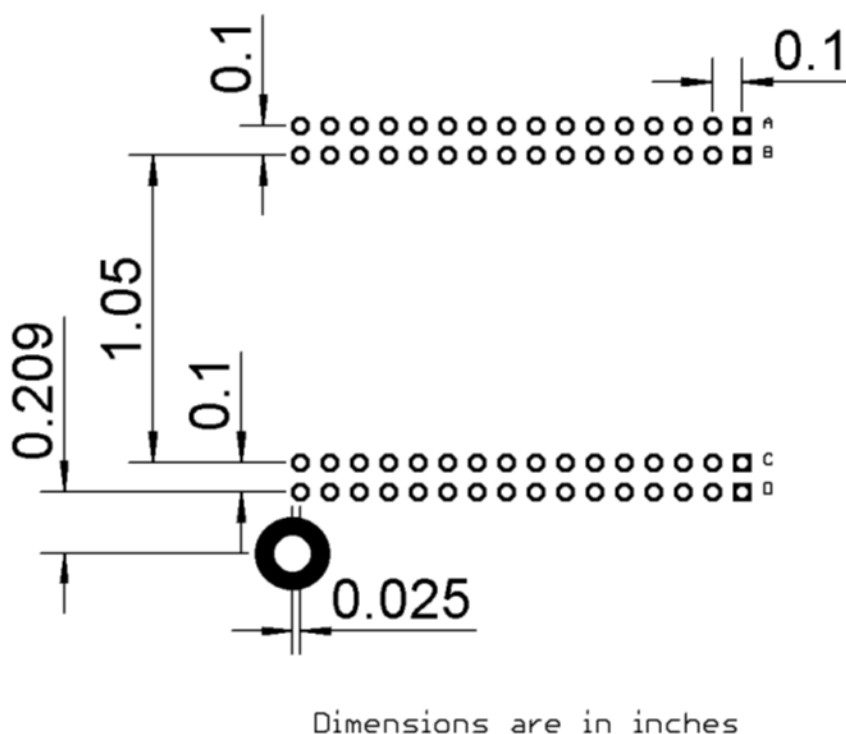


Figure 4 - Socket dimensions to mate the PROFIBUS Network Interface Module



Figure 5 shows the location of the X1 connector relative to the PROFIBUS Network Interface module outline. The dimensions are referenced to the center of pin X1-A1 and the upper right corner of the PC board.

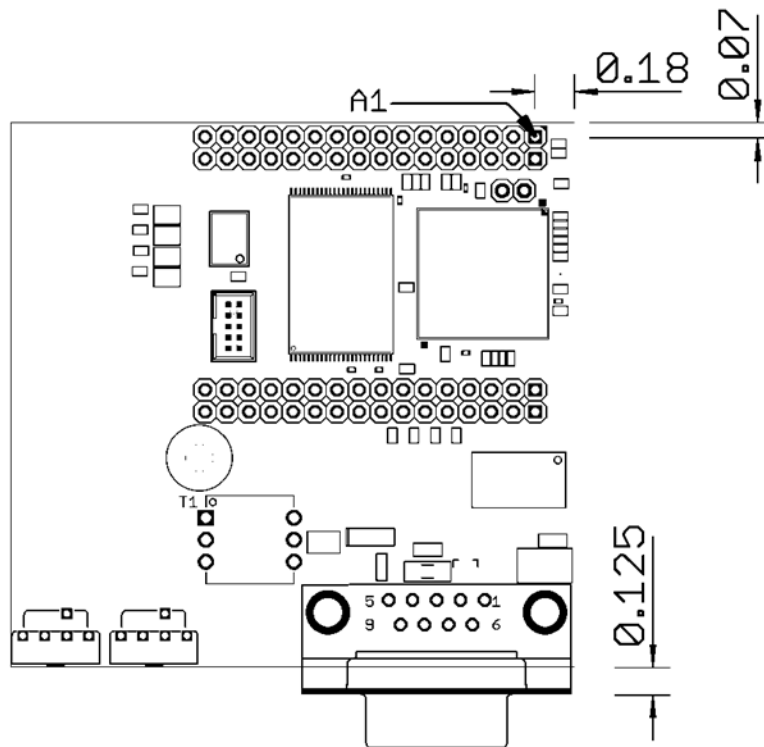


Figure 5 - Location of X1 connector and Pin A1

## 2.3 Connector Pinout

A summary on the pinout is shown in Figure 6. The detailed pin definition is provided in Table 1 through Table 4. All signals are 3.3V logic levels. All inputs **except** **MAN\_RESET\_N** are 5 volt tolerant. **MAN\_RESET\_N** is **not** 5 volt tolerant, and must be supplied by a +3.3V signal.

Chassis ground is provided on pin X1-C10 for additional shielding of the Ethernet network components.

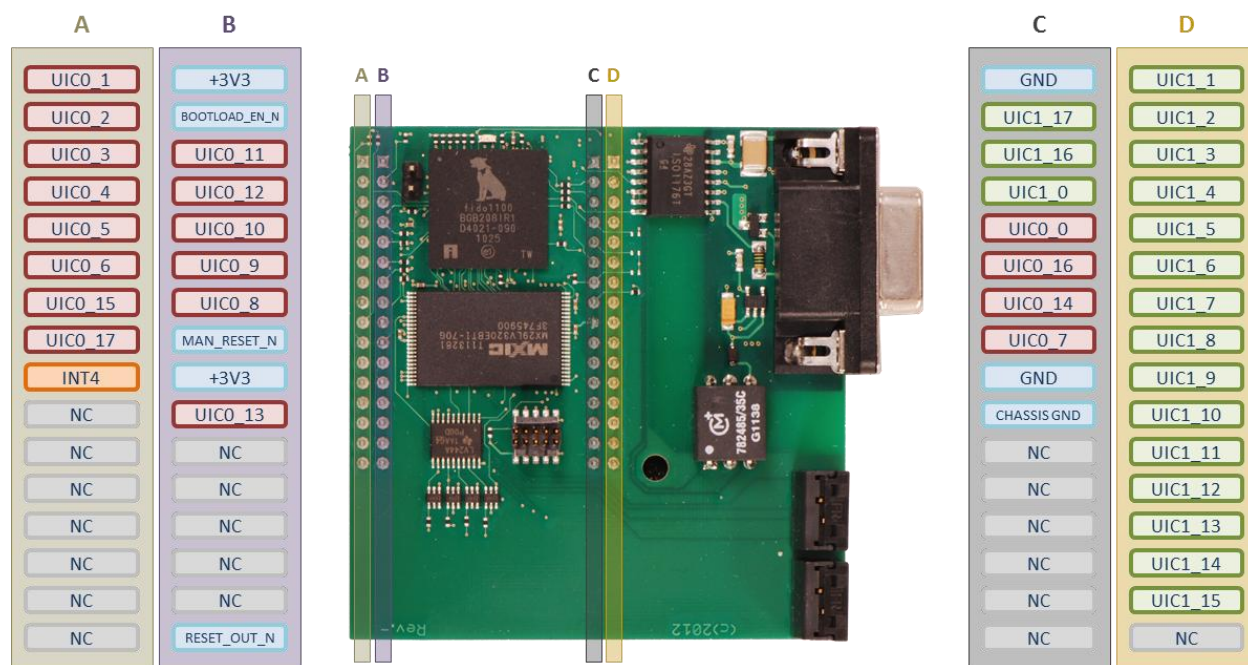


Figure 6 - Summary of Connector Pin Names

Table 1 – PROFIBUS Network Interface Module Connector Pin Definition – X1-A Connector

| <b>X1 Pin</b> | <b>Signal Name</b> | <b>Direction</b> | <b>Function</b>                                                                        |
|---------------|--------------------|------------------|----------------------------------------------------------------------------------------|
| A1            | UIC0_1             | Input            | Write Data Bit 1 for Parallel Host Interface                                           |
| A2            | UIC0_2             | Input            | Write Data Bit 2 for Parallel Host Interface                                           |
| A3            | UIC0_3             | Input            | Write Data Bit 3 for Parallel Host Interface                                           |
| A4            | UIC0_4             | Input            | Write Data Bit 4 for Parallel Host Interface                                           |
| A5            | UIC0_5             | Input            | Write Data Bit 5 for Parallel Host Interface                                           |
| A6            | UIC0_6             | Input            | Write Data Bit 6 for Parallel Host Interface                                           |
| A7            | UIC0_15            | Input            | Write Data Bit 15 for Parallel Host Interface                                          |
| A8            | UIC0_17            | Output           | “INT4” connection for Parallel Host Interface                                          |
| A9            | INT4               | Input            | Interrupt 4, has 10K pull-up resistor on module;<br>“USED” for Parallel Host Interface |
| A10           | INT5               | Input            | Interrupt 5, has 10K pull-up resistor on module                                        |
| A11           | INT6               | Input            | Interrupt 6, has 10K pull-up resistor on module                                        |
| A12           | NC                 | Not Connected    | Spare pin                                                                              |
| A13           | NC                 | Not Connected    | Spare pin                                                                              |
| A14           | NC                 | Not Connected    | Spare pin                                                                              |
| A15           | NC                 | Not Connected    | Spare pin                                                                              |
| A16           | NC                 | Not Connected    | Spare pin                                                                              |

Table 2 – PROFIBUS Network Interface Module Connector Pin Definition – X1-B Connector

| <b>X1<br/>Pin</b> | <b>Signal Name</b> | <b>Direction</b> | <b>Function</b>                                                                    |
|-------------------|--------------------|------------------|------------------------------------------------------------------------------------|
| B1                | +3V3               | Power            | +3.3V Power Supply Input                                                           |
| B2                | BOOTLOAD_EN_N      | Input            | Bootload Enable (active low),<br>has 10K pull-up resistor on module                |
| B3                | UIC0_11            | Input            | Write Data Bit 11 for Parallel Host Interface                                      |
| B4                | UIC0_12            | Input            | Write Data Bit 12 for Parallel Host Interface                                      |
| B5                | UIC0_10            | Input            | Write Data Bit 10 for Parallel Host Interface                                      |
| B6                | UIC0_9             | Input            | Write Data Bit 9 for Parallel Host Interface                                       |
| B7                | UIC0_8             | Input            | Write Data Bit 8 for Parallel Host Interface                                       |
| B8                | MAN_RESET_N        | Input            | Manual Reset Input to FIDO's supervisor IC (active low);<br><b>Not 5V Tolerant</b> |
| B9                | +3V3               | Power            | +3.3V Power Supply Input                                                           |
| B10               | UIC0_13            | Input            | Write Data Bit 13 for Parallel Host Interface                                      |
| B11               | TC0IN              | Input            | Timer/Counter                                                                      |
| B12               | T0IC3_T0OC3        | Bi-directional   | Timer/Counter                                                                      |
| B13               | T0IC2_T0OC2        | Bi-directional   | Timer/Counter                                                                      |
| B14               | T0IC1_T0OC1        | Bi-directional   | Timer/Counter                                                                      |
| B15               | T0IC0_T0OC0        | Bi-directional   | Timer/Counter                                                                      |
| B16               | RESET_OUT_N        | Output           | FIDO's reset output                                                                |

Table 3 – PROFIBUS Network Interface Module Connector Pin Definition – X1-C Connector

| <b>X1 Pin</b> | <b>Signal Name</b> | <b>Direction</b> | <b>Function</b>                                                                                    |
|---------------|--------------------|------------------|----------------------------------------------------------------------------------------------------|
| C1            | GND                | Ground           | Signal Ground                                                                                      |
| C2            | UIC1_17            | Output           | “FIFONOTEMPTY_N” for Parallel Host Interface                                                       |
| C3            | UIC1_16            | Input            | TX for UART Host Interface (Connect to Host RX);<br>or “RD_SEL_N” for Parallel Host Interface      |
| C4            | UIC1_0             | Output           | RX for UART Host Interface (Connect to Host TX);<br>or Read Data Bit 0 for Parallel Host Interface |
| C5            | UIC0_0             | Input            | Write Data Bit 0 for Parallel Host Interface                                                       |
| C6            | UIC0_16            | Input            | “WR_SEL_N” for Parallel Host Interface                                                             |
| C7            | UIC0_14            | Output           | Write Data Bit 14 for Parallel Host Interface                                                      |
| C8            | UIC0_7             | Output           | Write Data Bit 7 for Parallel Host Interface                                                       |
| C9            | GND                | Ground           | Signal Ground                                                                                      |
| C10           | NC                 | Not Connected    | Do Not Connect                                                                                     |
| C11           | TC1IN              | Input            | Timer/Counter                                                                                      |
| C12           | T1IC3_T1OC3        | Bi-directional   | Timer/Counter                                                                                      |
| C13           | T1IC2_T1OC2        | Bi-directional   | Timer/Counter                                                                                      |
| C14           | T1IC1_T1OC1        | Bi-directional   | Timer/Counter                                                                                      |
| C15           | T1IC0_T1OC0        | Bi-directional   | Timer/Counter                                                                                      |
| C16           | NC                 | Not Connected    | Spare pin                                                                                          |

Table 4 – PROFIBUS Network Interface Module Connector Pin Definition – X1-D Connector

| <b>X1<br/>Pin</b> | <b>Signal Name</b> | <b>Direction</b> | <b>Function</b>                              |
|-------------------|--------------------|------------------|----------------------------------------------|
| D1                | UIC1_1             | Output           | Read Data Bit 1 for Parallel Host Interface  |
| D2                | UIC1_2             | Output           | Read Data Bit 2 for Parallel Host Interface  |
| D3                | UIC1_3             | Output           | Read Data Bit 3 for Parallel Host Interface  |
| D4                | UIC1_4             | Output           | Read Data Bit 4 for Parallel Host Interface  |
| D5                | UIC1_5             | Output           | Read Data Bit 5 for Parallel Host Interface  |
| D6                | UIC1_6             | Output           | Read Data Bit 6 for Parallel Host Interface  |
| D7                | UIC1_7             | Output           | Read Data Bit 7 for Parallel Host Interface  |
| D8                | UIC1_8             | Output           | Read Data Bit 8 for Parallel Host Interface  |
| D9                | UIC1_9             | Output           | Read Data Bit 9 for Parallel Host Interface  |
| D10               | UIC1_10            | Output           | Read Data Bit 10 for Parallel Host Interface |
| D11               | UIC1_11            | Output           | Read Data Bit 11 for Parallel Host Interface |
| D12               | UIC1_12            | Output           | Read Data Bit 12 for Parallel Host Interface |
| D13               | UIC1_13            | Output           | Read Data Bit 13 for Parallel Host Interface |
| D14               | UIC1_14            | Output           | Read Data Bit 14 for Parallel Host Interface |
| D15               | UIC1_15            | Output           | Read Data Bit 15 for Parallel Host Interface |
| D16               | NC                 | Not Connected    | Spare pin                                    |

## 2.4 Power requirements

The PROFIBUS Network Interface module consumes approximately 1.5W, supplied from a single +3.3V supply. The power supply requirements for voltage and current are  $+3.3V \pm 10\%$ , 500mA. The 3.3V power is supplied to pins X1-B1 and X1-B9 and ground is connected to pins X1-C1 and X1-C9.

Chassis ground is provided on the DB9 connector shield.

## 2.5 Reset Requirements

The PROFIBUS Network Interface module may be reset by the application hardware. Module signal X1-B8, referred to as MAN\_RESET\_N is the reset input to the PROFIBUS Network Interface module. This input is connected to the manual reset input of the on-board reset supervisor (U3). U3 is an APX811-29UG-7 which requires a low pulse for a minimum of 10uS in order to generate a valid reset.

Since the module does have an on-board supervisor IC, it may be allowed to initialize without an external reset source. Module signal X1-B16, referred to as RESET\_OUT\_N, is an output that indicates if the module is in a reset state. The signal will go low to indicate the reset state is active.

Regardless of how the module is reset, it will not be available for communication until the software has initialized the module and entered the operating state. The time required for the module to enter the operating state is 1.0 second after the receipt of a valid reset pulse or after power is valid if no external reset source is used.

## 3. Host Processor and PROFIBUS Network Interface Module Communication Interfaces

### 3.1 UART Host Interface

The PROFIBUS Network Interface module requires a host processor, and may interface to the host via a UART (serial) or a 16-bit parallel interface. Implementation of each of these interfaces is described in the following paragraphs. The UART Host Interface is implemented using two pins from the PROFIBUS Interface. These pins are X1-C3 and X1-C4. The signal names for these pins, as shown in Table 3 are UIC1\_16 and UIC1\_0, respectively. UIC1\_16 is the PROFIBUS Interface TX signal, and UIC1\_0 is the PROFIBUS Interface RX signal. The PROFIBUS Interface TX signal must be connected to the Host Processor RX signal, and the PROFIBUS Interface RX signal must be connected to the Host Processor TX signal. Figure 7 provides an overview of these signal connections.

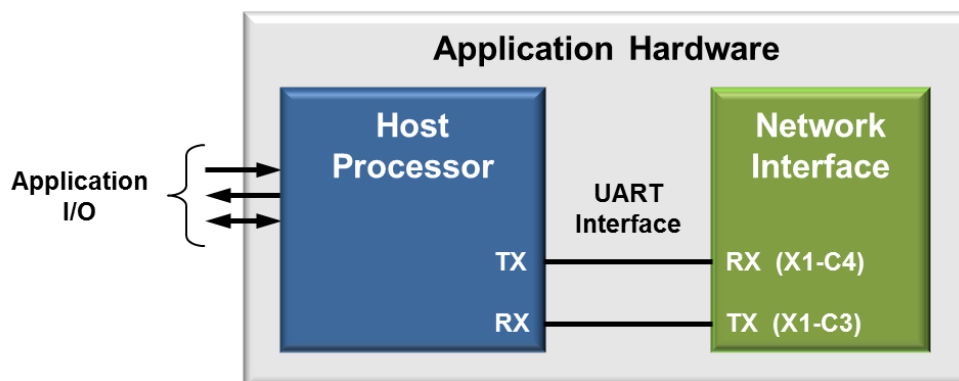


Figure 7 – UART Host Interface Connection

### 3.2 Parallel Host Interface

The Parallel Host Interface is implemented as a 16-bit read FIFO and a 16-bit write FIFO. Some support circuitry between the Host Processor and PROFIBUS Interface is required and must be designed into the application hardware. The host processor connects to a 16-bit data bus and must use 4 control signals to either read data from the PROFIBUS Interface or write data to the PROFIBUS Interface. The PROFIBUS Interface connects to a 16-bit write data bus, a 16-bit read data bus, and 5 control signals. Figure 8 provides an overview of these connections.

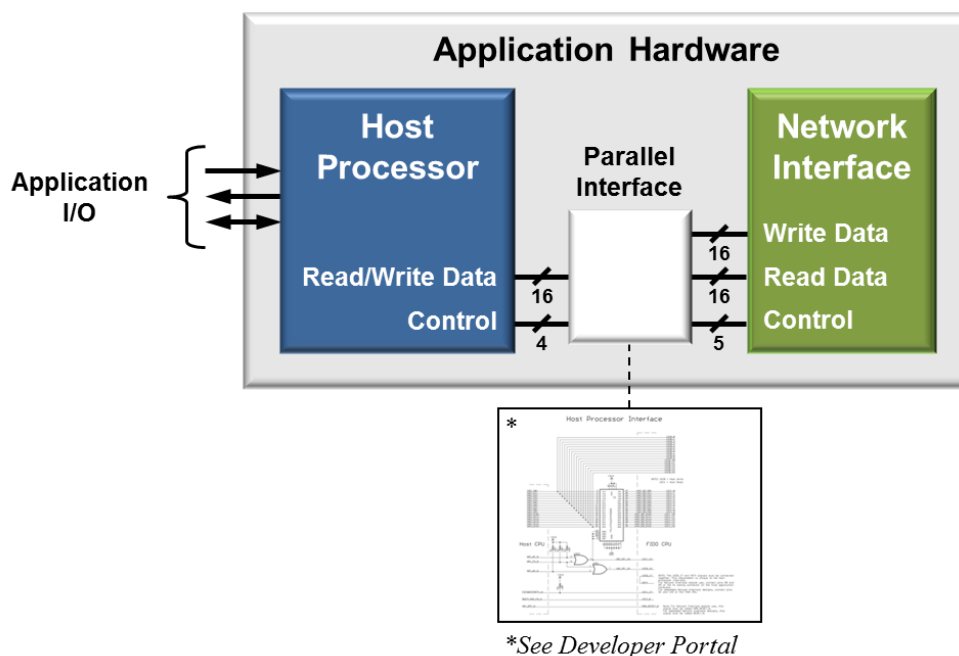


Figure 8 – Parallel Host Interface Connection

Refer to the “Parallel Interface Personality Module” (SCH-NI\_400-EDB-001) for details on the



circuitry required for the Parallel Host Interface. Table 1 through Table 4 may be used to understand the signal names in the schematic. The 16-bit data bus on the host side of the interface is referred to as HPI\_D0 through HPI\_D15. The four control signals are referred to as HPI\_OE\_N, HPI\_CS\_N, HPI\_WE\_N, and FIFONOTEMPTY\_N. As noted in the schematics, it is important that signal pins X1-A9 and X1-A8 on the PROFIBUS Interface connector be tied together when integrating the module on the application hardware.

Refer to the “Parallel Interface User Guide” for details regarding the software driver used by the Parallel Host Interface. This document is provided on the USB flash drive included with the evaluation kit, and it may be downloaded from the Developer Portal on the Innovasic website.

## 4. Considerations for Production and Maintenance

There are three methods for configuring and programming the PROFIBUS Network Interface during production of end use systems. These methods are:

1. **Bootloader**
2. **JTAG**
3. **Flash Programmer**

The Bootloader and JTAG methods can also be used to perform field updates during maintenance for the end devices. The subparagraphs below provide an overview of these methods. Figure 9 shows the connections and devices involved for all three methods for either a module or embedded design.

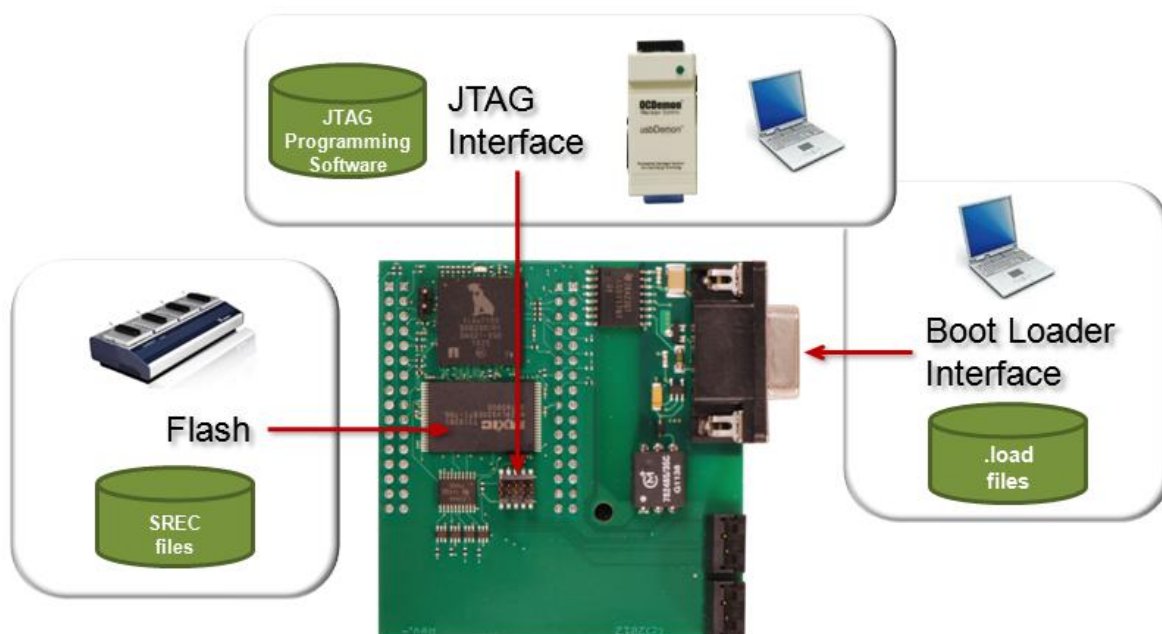


Figure 9 – Programming Connections and Devices

## 4.1 Bootloader

Innovasic supports programming flash chips on the Network Interface modules or embedded designs over the Network/Bus. The type of programming file used to support this is called a .load file. Innovasic supplies .load files for each software component in the Network Interface. These components are identified as:

- Bootloader
- Unified Interface
- Network Application
- Configuration Data

These .load file types are available in the Developer Portal on the Innovasic website, and can be loaded as described in the “Bootloader User Guide.pdf”.

It is important to note that the BOOTLOADER\_EN\_N signal **must be** grounded when the Network Interface powers up in order to enter the programming mode. This is an important consideration if your final product requires field updates.

## 4.2 JTAG

Innovasic supports programming flash chips on the Network Interface modules or embedded designs using the JTAG Connector. The type of programming file used to support this is called an .elf file. Innovasic supplies .elf files for each software component in the Network Interface. These components are identified as:

- Bootloader
- Unified Interface
- Network Application
- Configuration Data

These .elf file types are available in the Developer Portal on the Innovasic website.

Using the JTAG method for configuring and programming the Network Interface requires a PC, JTAG “wiggler”, and programming software, and .elf programming files. The wiggler and programming software may be ordered from Innovasic using part number “RapID-PGMR VMCGR”.

A connector compatible with the ribbon-cable side of the wiggler is already installed on the module. This connector must be used in the embedded design. The ribbon cable on the wiggler connects to the module/embedded design connector. The other end of the wiggler connects to the USB port of the PC. Detailed instructions for loading and programming with the .elf files are provided with the JTAG programming software.

Note that it is possible to program blank flash using the JTAG method. This method is useful if a Flash Programmer is not available. Access to the JTAG connector is required; however, grounding BOOTLOADER\_EN\_N is not required.

### 4.3 Flash Programmer

Innovasic supports programming individual, blank flash chips using a flash programmer. The type of programming file used to support this is called a Motorola S record file (.srec). Innovasic supplies .srec files for each software component in the Network Interface. These components are identified as:

- Bootloader
- Unified Interface
- Network Application
- Configuration Data

These .srec file types are available in the Developer Portal on the Innovasic website, and can be sequentially loaded into the flash programmer. There is no need to be concerned the data will overlap. Once the files are loaded into the programmer the complete executable package can be programmed into the flash chip.

## 5. For Additional Information

The Innovasic Support Team is continually planning and creating tools for your use. Visit <http://www.innovasic.com> for up-to-date documentation and software. Our goal is to provide timely, complete, accurate, useful, and easy-to-understand information. Please feel free to contact our experts at Innovasic at any time with suggestions, comments, or questions.

Innovasic Support Team  
5635 Jefferson St. NE, Suite A  
Albuquerque, NM 87109 USA

(505) 883-5263  
Fax: (505) 883-5477  
Toll Free: (888) 824-4184  
E-mail: [support@innovasic.com](mailto:support@innovasic.com)  
Website: <http://www.Innovasic.com>

## 6. Revision History

Table 5 – Document Revision History for IA211130425

| Date           | Revision | Description     | Page(s) |
|----------------|----------|-----------------|---------|
| April 24, 2013 | 00       | Initial release | NA      |